


M83 Datamate Connectors




Female Vertical PC Tail

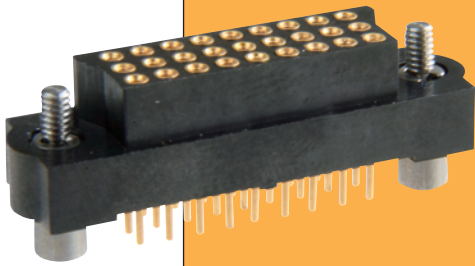

- ❖ Choice of compatible jackscrews.
- ❖ All contacts are gold finish for full RoHS compliance.
- ❖ See pages 68 and 69 for configurations including special contacts.
- ❖ Contact datamate@harwin.com for alternative contact configurations.

FEMALE VERTICAL

| CALCULATION | |
|-------------|-----------------------------------|
| A | B + 15 |
| B | (Total No. of contacts - 3) x 2/3 |
| C | B + 9 |

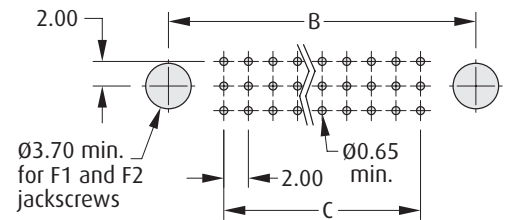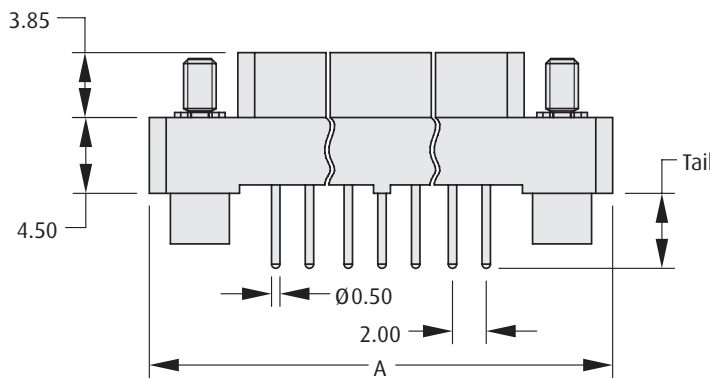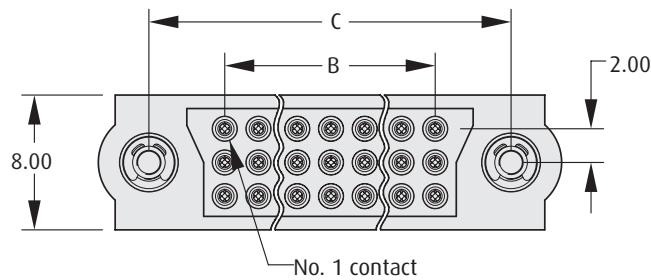

Recommended PC Board Pattern

Diagram shown with Jackscrew F2 assembled.

HOW TO ORDER

M83 - LF TX XX N XX - 0000 - 000

SERIES CODE

TOTAL NO. OF CONTACTS
27, 36, 48, 51, 60, 78, 96

| TAIL | |
|-----------|------------|
| T1 | 3mm Tail |
| T2 | 4.5mm Tail |

| JACKSCREW | |
|-----------|---------------------------------|
| 00 | No Jackscrew |
| Fx | Female Jackscrews - see page 64 |

www.harwin.com

All dimensions in mm.

