
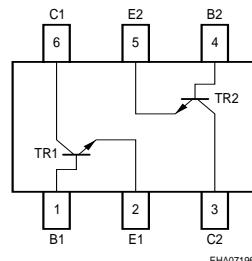


## NPN Silicon RF Transistor

- For low-noise, high-gain broadband amplifiers at collector currents from 0.2 mA to 20 mA
- $f_T = 8$  GHz  
 $F = 1.2$  dB at 900 MHz
- Two (galvanic) internal isolated Transistors in one package

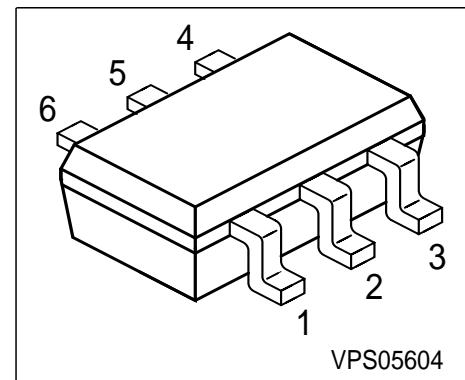

**ESD:** Electrostatic discharge sensitive device, observe handling precaution!

Type	Marking	Pin Configuration						Package
BFS482	RGs	1=B	2=E	3=C	4=B	5=E	6=C	SOT363

### Maximum Ratings

Parameter	Symbol	Value	Unit
Collector-emitter voltage	$V_{CEO}$	12	V
Collector-emitter voltage	$V_{CES}$	20	
Collector-base voltage	$V_{CBO}$	20	
Emitter-base voltage	$V_{EBO}$	2	
Collector current	$I_C$	35	mA
Base current	$I_B$	4	
Total power dissipation $T_S \leq 81^\circ\text{C}$ 1)	$P_{tot}$	250	mW
Junction temperature	$T_j$	150	$^\circ\text{C}$
Ambient temperature	$T_A$	-65 ... 150	
Storage temperature	$T_{sta}$	-65 ... 150	

### Thermal Resistance

Junction - soldering point <sup>2)</sup>	$R_{thJS}$	$\leq 275$	K/W
--	------------	------------	-----

<sup>1</sup>  $T_S$  is measured on the collector lead at the soldering point to the pcb

<sup>2</sup> For calculation of  $R_{thJA}$  please refer to Application Note Thermal Resistance

**Electrical Characteristics** at  $T_A = 25^\circ\text{C}$ , unless otherwise specified.

<b>Parameter</b>	<b>Symbol</b>	<b>Values</b>			<b>Unit</b>
		<b>min.</b>	<b>typ.</b>	<b>max.</b>	
<b>DC characteristics</b>					
Collector-emitter breakdown voltage $I_C = 1 \text{ mA}, I_B = 0$	$V_{(\text{BR})\text{CEO}}$	12	-	-	V
Collector-emitter cutoff current $V_{CE} = 20 \text{ V}, V_{BE} = 0$	$I_{CES}$	-	-	100	$\mu\text{A}$
Collector-base cutoff current $V_{CB} = 10 \text{ V}, I_E = 0$	$I_{CBO}$	-	-	100	nA
Emitter-base cutoff current $V_{EB} = 1 \text{ V}, I_C = 0$	$I_{EBO}$	-	-	1	$\mu\text{A}$
DC current gain $I_C = 10 \text{ mA}, V_{CE} = 8 \text{ V}$	$h_{FE}$	50	100	200	-


**Electrical Characteristics** at  $T_A = 25^\circ\text{C}$ , unless otherwise specified.

<b>Parameter</b>	<b>Symbol</b>	<b>Values</b>			<b>Unit</b>
		<b>min.</b>	<b>typ.</b>	<b>max.</b>	
<b>AC characteristics</b> (verified by random sampling)					
Transition frequency $I_C = 15 \text{ mA}, V_{CE} = 8 \text{ V}, f = 500 \text{ MHz}$	$f_T$	6	8	-	GHz
Collector-base capacitance $V_{CB} = 10 \text{ V}, f = 1 \text{ MHz}$	$C_{cb}$	-	0.3	0.45	pF
Collector-emitter capacitance $V_{CE} = 10 \text{ V}, f = 1 \text{ MHz}$	$C_{ce}$	-	0.12	-	
Emitter-base capacitance $V_{EB} = 0.5 \text{ V}, f = 1 \text{ MHz}$	$C_{eb}$	-	0.65	-	
Noise figure $I_C = 3 \text{ mA}, V_{CE} = 8 \text{ V}, Z_S = Z_{\text{Sopt}}, f = 900 \text{ MHz}$ $f = 1.8 \text{ GHz}$	$F$				dB
Power gain, maximum stable <sup>1)</sup> $I_C = 10 \text{ mA}, V_{CE} = 8 \text{ V}, Z_S = Z_{\text{Sopt}}, Z_L = Z_{\text{Lopt}}, f = 900 \text{ MHz}$	$G_{ms}$	-	19.5	-	
Power gain, maximum available <sup>2)</sup> $I_C = 10 \text{ mA}, V_{CE} = 8 \text{ V}, Z_S = Z_{\text{Sopt}}, Z_L = Z_{\text{Lopt}}, f = 1.8 \text{ GHz}$	$G_{ma}$	-	13	-	
Transducer gain $I_C = 10 \text{ mA}, V_{CE} = 8 \text{ V}, Z_S = Z_L = 50\Omega, f = 900 \text{ MHz}$ $f = 1.8 \text{ GHz}$	$ S_{21e} ^2$				


$$^1 G_{ms} = |S_{21} / S_{12}|$$

$$^2 G_{ma} = |S_{21} / S_{12}| (k - (k^2 - 1)^{1/2})$$

**Total power dissipation  $P_{\text{tot}} = f(T_S)$**

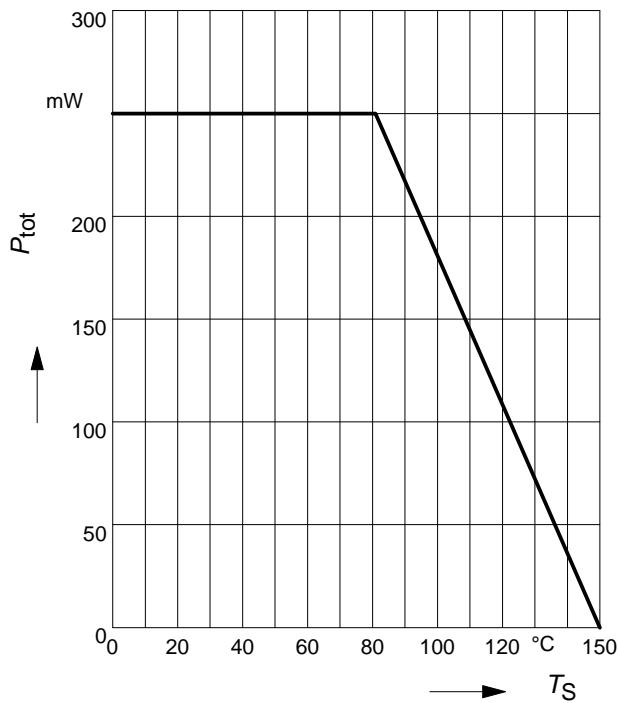


**Permissible Pulse Load  $R_{\text{thJS}} = f(t_p)$**

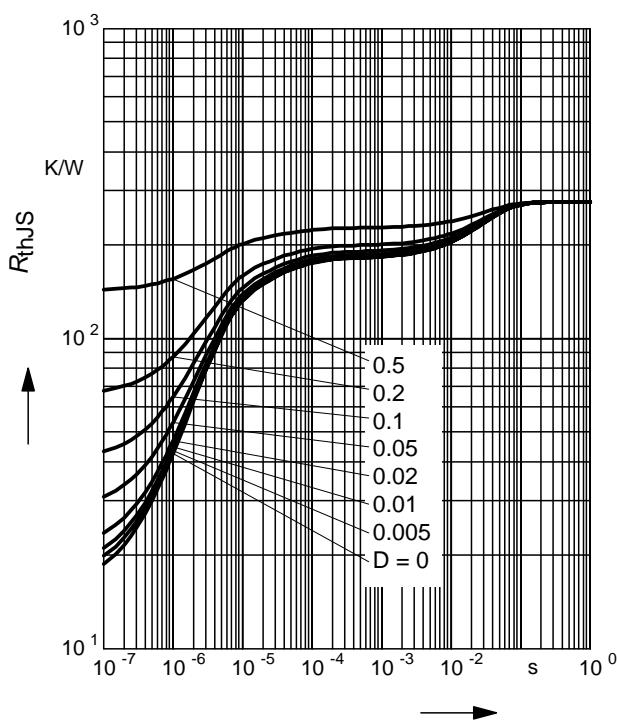


**Permissible Pulse Load**

$$P_{\text{totmax}}/P_{\text{totDC}} = f(t_p)$$

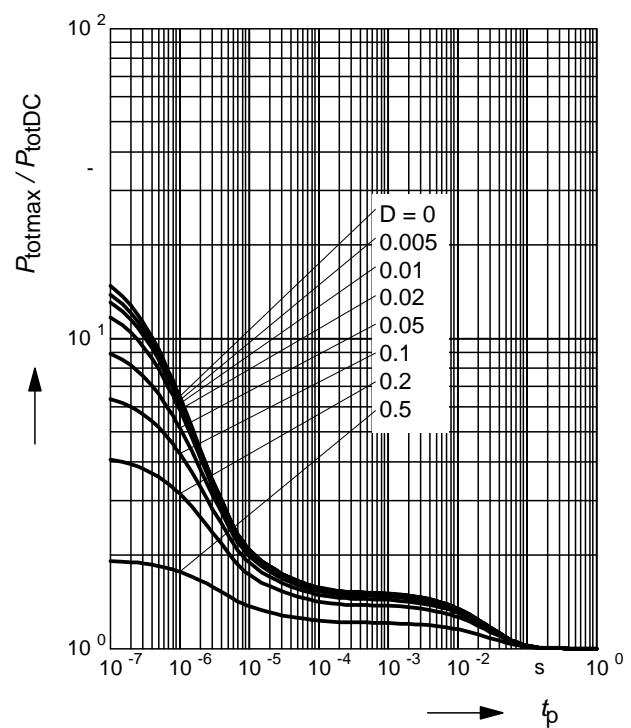


**Collector-base capacitance**  $C_{cb} = f(V_{CB})$   
 $f = 1\text{MHz}$

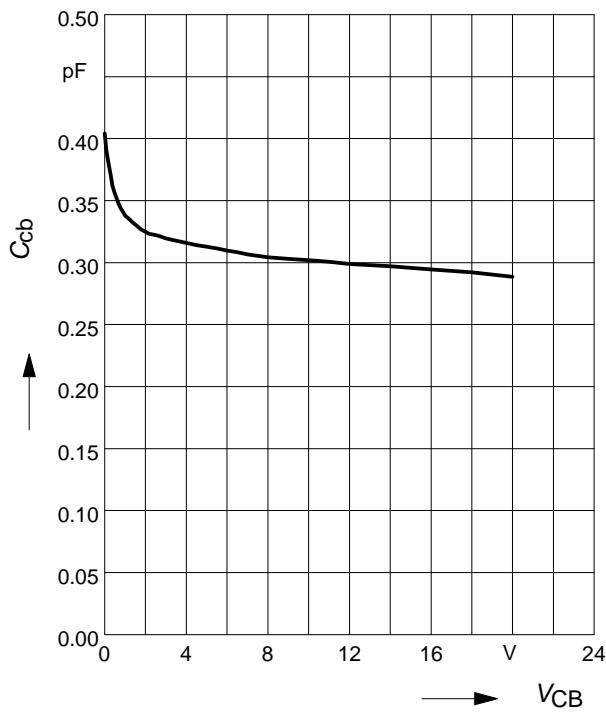

**Transition frequency**  $f_T = f(I_C)$


$V_{CE}$  = Parameter

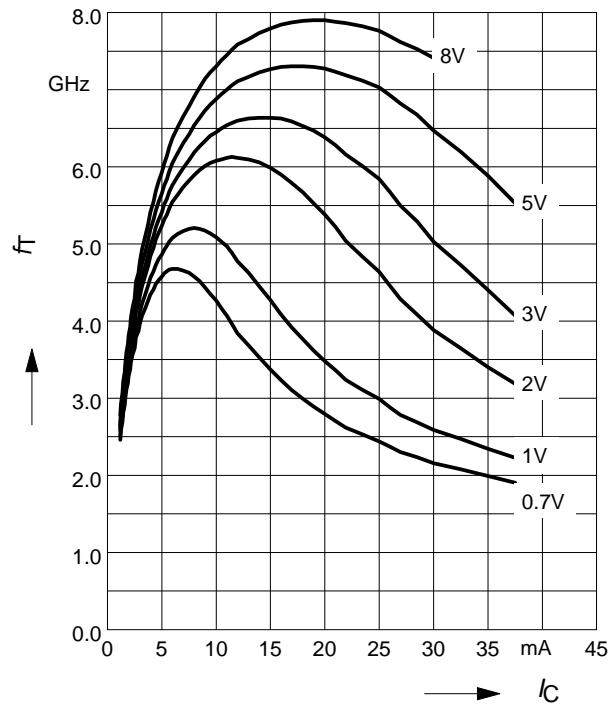

**Power Gain**  $G_{ma}, G_{ms} = f(I_C)$

$f = 0.9\text{GHz}$


$V_{CE}$  = Parameter

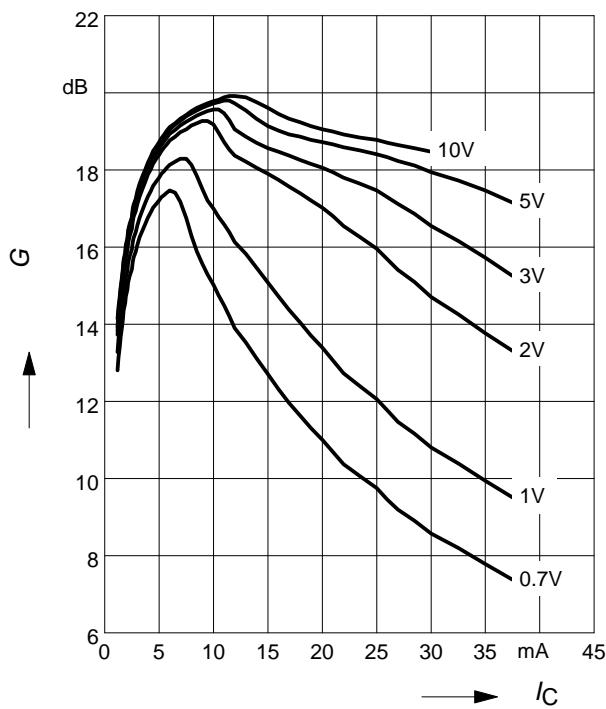

**Power Gain**  $G_{ma}, G_{ms} = f(I_C)$

$f = 1.8\text{GHz}$


$V_{CE}$  = Parameter

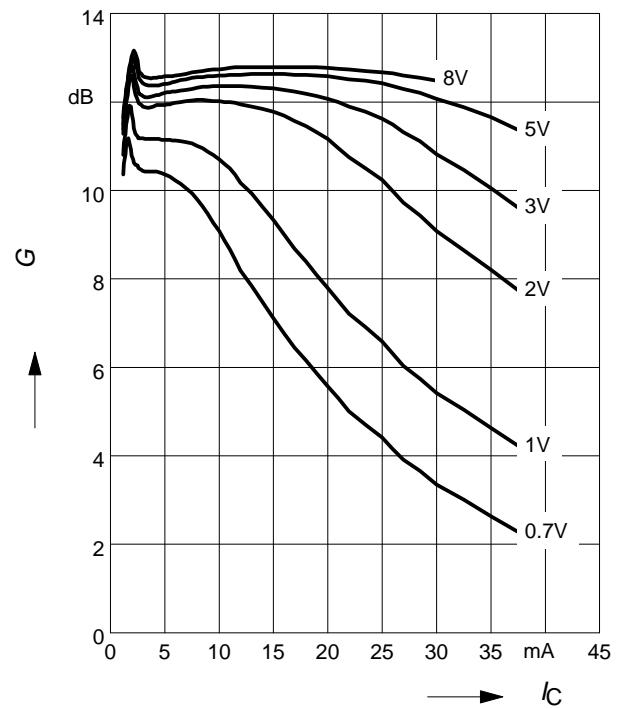

**Power Gain**  $G_{ma}$ ,  $G_{ms} = f(V_{CE})$ :

$|S_{21}|^2 = f(V_{CE})$ :


$f$  = Parameter

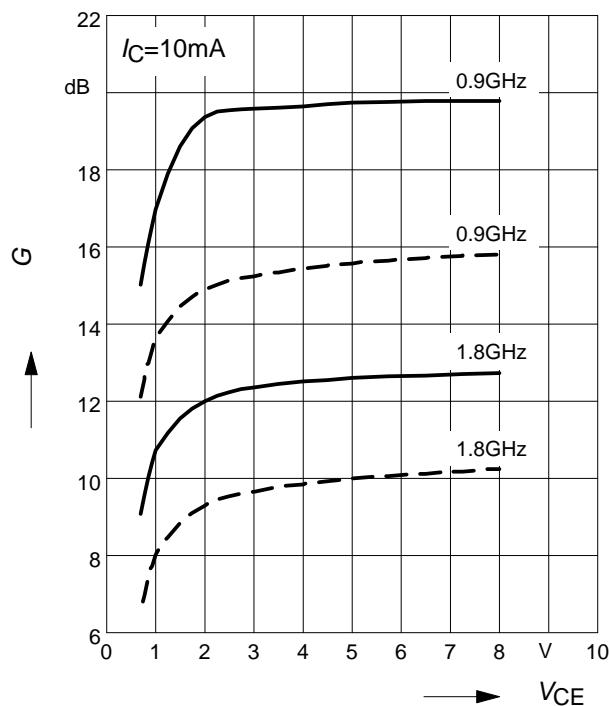

**Intermodulation Intercept Point**  $IP_3=f(I_C)$


(3rd order, Output,  $Z_S=Z_L=50\Omega$ )

$V_{CE}$  = Parameter,  $f = 900\text{MHz}$

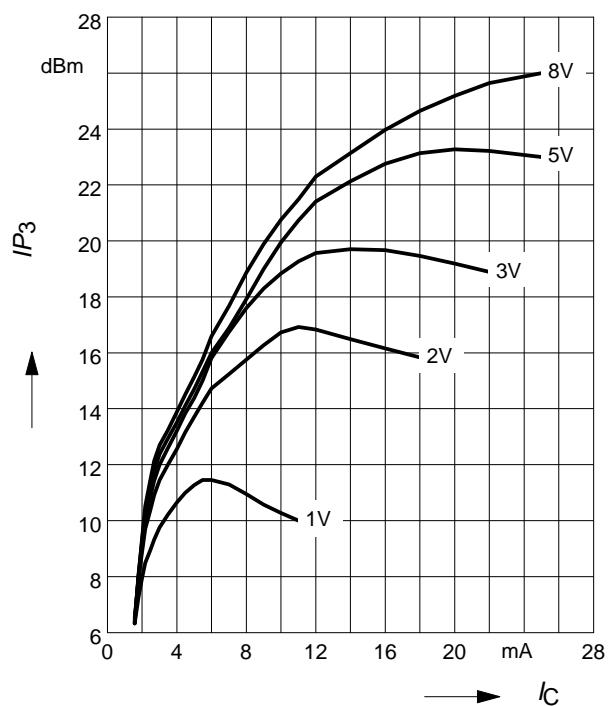


**Power Gain**  $G_{ma}$ ,  $G_{ms} = f(f)$

$V_{CE}$  = Parameter

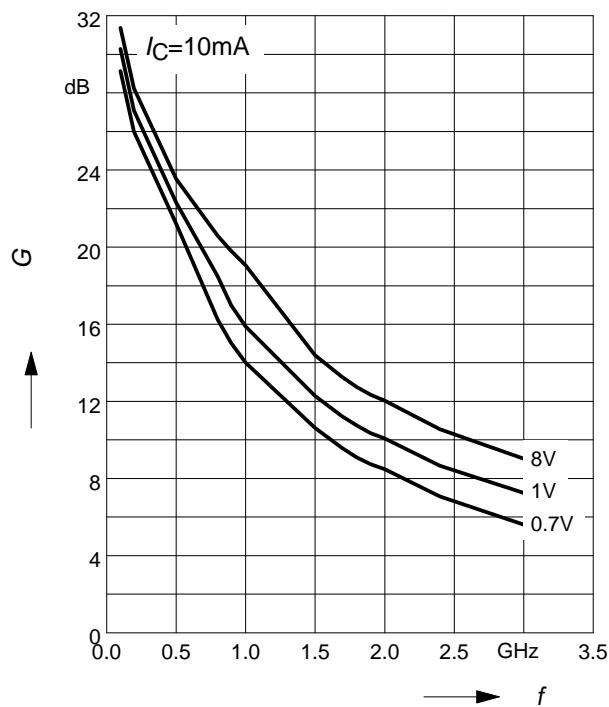

**Power Gain**  $|S_{21}|^2 = f(f)$

$V_{CE}$  = Parameter

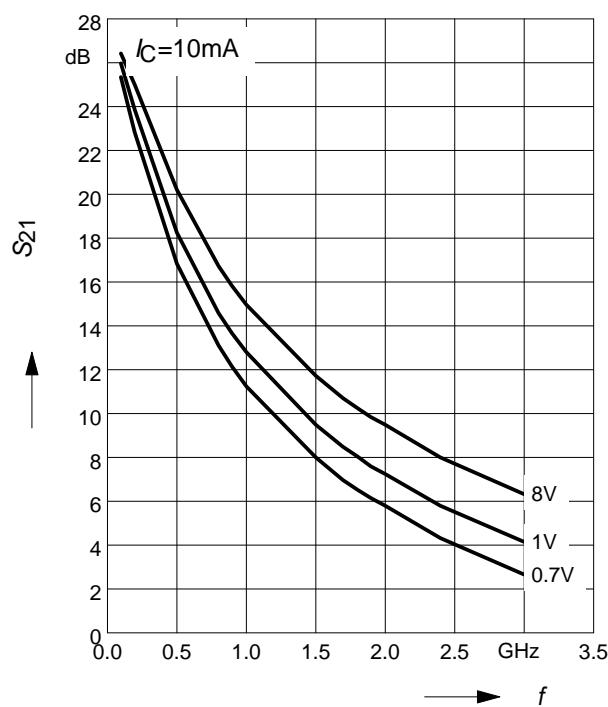

**Published by Infineon Technologies AG,  
St.-Martin-Strasse 53,  
81669 München**

**© Infineon Technologies AG 2004.  
All Rights Reserved.**

**Attention please!**

The information herein is given to describe certain components and shall not be considered as a guarantee of characteristics.

Terms of delivery and rights to technical change reserved.

We hereby disclaim any and all warranties, including but not limited to warranties of non-infringement, regarding circuits, descriptions and charts stated herein.

**Information**

For further information on technology, delivery terms and conditions and prices please contact your nearest Infineon Technologies Office ([www.Infineon.com](http://www.Infineon.com)).

**Warnings**

Due to technical requirements components may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies Office.

Infineon Technologies Components may only be used in life-support devices or systems with the express written approval of Infineon Technologies, if a failure of such components can reasonably be expected to cause the failure of that life-support device or system, or to affect the safety or effectiveness of that device or system. Life support devices or systems are intended to be implanted in the human body, or to support and/or maintain and sustain and/or protect human life. If they fail, it is reasonable to assume that the health of the user or other persons may be endangered.