


# Datamate Connectors

## Female Crimp

- ❖ Part numbers are for housings and the equivalent number of contacts.
- ❖ Contacts are rear insertable.
- ❖ For British Standard versions see pages 14 to 15.
- ❖ Hoods & cable assembly service available – contact [datamate@harwin.com](mailto:datamate@harwin.com).
- ❖ Spare contacts are available – see page 16.

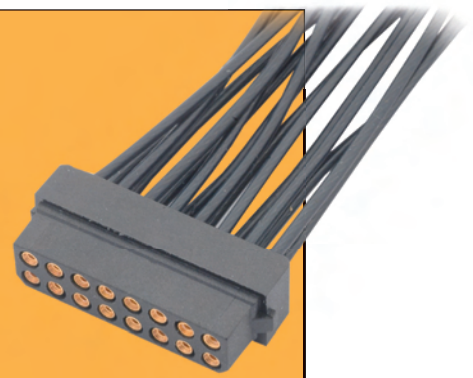

SINGLE ROW	CALCULATION	DOUBLE ROW	CALCULATION
	<b>A</b> B + 5.15		<b>A</b> B + 5.15
	<b>B</b> (Total No. of contacts - 1) x 2		<b>B</b> Total No. of contacts - 2

TOOLS	WIRE STRIPPING DETAILS
<p><b>Recommended Crimp Tool</b> – M22520/2-01  <b>Positioner</b> – T5747  <b>Contact Insertion/Removal Tool</b> – Z80-280                      See pages 77 to 79                      ❖ Instruction sheets available at <a href="http://www.harwin.com/downloads/instructions">www.harwin.com/downloads/instructions</a></p>	

### HOW TO ORDER

M80 - XXX XX 05

SERIES CODE			FINISH
TYPE			
<b>888</b> Small Bore, Double Row			<b>01</b> Gold + Tin <span style="border: 1px solid black; border-radius: 50%; padding: 2px;">Pb</span>
<b>889</b> Large Bore, Double Row			<b>05</b> Gold <span style="border: 1px solid black; border-radius: 50%; padding: 2px;">Pb</span>
<b>898</b> Small Bore, Single Row			
<b>899</b> Large Bore, Single Row			

TOTAL NO. OF CONTACTS	
Single Row	<b>02 to 07, 17</b>
Double Row	<b>04, 06, 08, 10, 12, 14, 16, 18, 20, 26, 34</b>

All dimensions in mm.

[www.harwin.com](http://www.harwin.com)

